

# Small Recording Photo Album

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Small Recording Photo Album uses the latest digital recording technology to let you record new messages as many times as you like, without any tapes to change. You can record and play back up to 20 messages, one for each of 20 two-page spreads. The album's compact size lets you easily carry it wherever you go.

The album's features include:

**180 Seconds of Recording Time** — gives you up to 9 seconds to record your message for each two-page photo spread.

**20 Two-page Photo Spreads and Two Individual Pages** — let you fill the album with your favorite pictures.

**Lock/Record Option** — lets you lock the recording device to save your messages.

## INSTALLING BATTERIES

Your Small Recording Photo Album uses two AAA batteries (not supplied) for power. For the longest life and best performance, we recommend alkaline batteries, available at your RadioShack store.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
  - Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
1. Slide the battery compartment cover in the direction of the arrow to remove it.
  2. Place the batteries in the compartment as indicated by the battery icons to the right of the battery door.
  3. Replace the cover.

When the album's sound weakens or the display dims, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the album for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## LOADING THE PICTURES

The Small Recording Photo Album contains 20 two-page spreads marked with page numbers and 2 individual pages without page numbers. Each spread lets you insert two 4 × 6-inch (10.16 × 15.24 cm) pictures, and each individual page lets you insert one picture only, for a total of 42 pictures.

**Note:** The page number on the picture spread corresponds to the recorded message number.

## RECORDING A MESSAGE

You can record up to 20 memory messages (01–20) for the pictures on the two-page spreads. For each spread, you can record one message up to 9 seconds long.

**Note:** Each photo spread has the same page number on both sides. You can record only one message per page number.

1. Press **POWER**. The POWER indicator lights and - - appears.
2. Slide **LOCK/REC** to **REC**.
3. Open the album to the desired page number, then repeatedly press << or >> until the desired page number appears. For example, if you want to record message for Page 5, repeatedly press << or >> until 05 appears.
4. To begin recording, press **REC** and **PLAY** simultaneously. The REC indicator lights and the recorder beeps once.
5. Speak into the microphone on the top of the photo album in a normal voice. After 9 seconds, the recorder automatically stops recording and beeps twice. To stop recording sooner, press **REC** again. The recorder beeps and the REC indicator turns off.

### Notes:

- To prevent accidental erasure after recording, slide **LOCK/REC** back to **LOCK**.
- To conserve battery power when you are not using the recorder, press **POWER** to turn off the power.

## PLAYING THE MESSAGE

1. Press **POWER**. The POWER indicator lights and - - appears.
2. Open the album and turn to the desired page number, then repeatedly press << or >> to search for the corresponding message number.
3. Press **PLAY** to play the message.
4. To stop play before the message is over, press **PLAY** again. The recorder beeps once. To resume playing, press **PLAY** again.

**Note:** The message starts over from the beginning, not the point where you stopped it.

## CLEARING ALL MESSAGES

**Caution:** This will permanently erase all of the recorded messages at one time.

1. Set **LOCK/REC** to **REC**.
2. Hold down << and >> simultaneously. The REC indicator lights.
3. While still holding down << and >>, hold down **REC** for about 3 seconds. The album beeps twice when the memory is cleared.

CARE

To enjoy your Small Recording Photo Album for a long time:

- Keep the album dry. If it gets wet, wipe it dry immediately.
- Use and store the album only in normal temperature environments.
- Handle the album gently and carefully. Do not drop it.
- Keep the album away from dust and dirt.
- Wipe the album with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the album's internal components can cause a malfunction and might invalidate its warranty. If your album is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Source .....	Two AAA batteries (not supplied)
Battery Life (Continuous Use) .....	40 Minutes
Recording Time .....	9 Seconds (Maximum)/Message
Operating Temperature .....	32 to 104 ° F (0 to 40 ° C)
Dimensions .....	7 <sup>1</sup> / <sub>2</sub> × 6 <sup>11</sup> / <sub>16</sub> × 1 <sup>3</sup> / <sub>16</sub> in. (HWD) (188.5 × 167 × 30.5 mm)
Weight .....	12.35 oz (without batteries) (350 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99